


How to install the Intel PC STICK

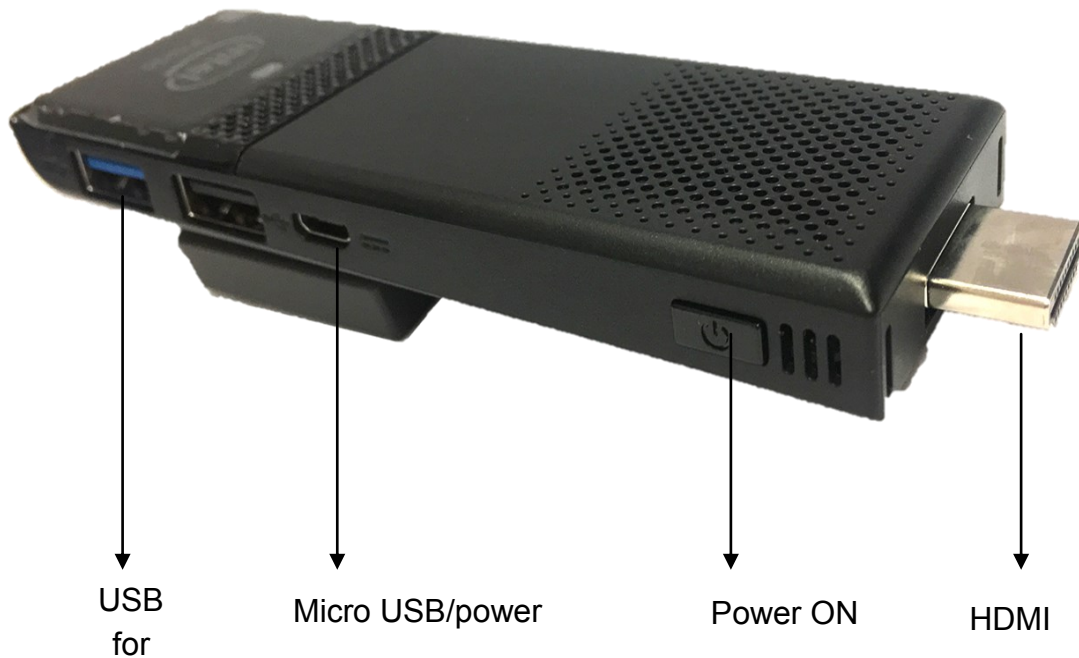

Connecting Intel Dongle to LCD Touch Panel

1. Connect power adaptor to 240v power source and connect micro usb cable to power connection on dongle.
2. Power to dongle can be without ac adaptor by using USB A ---USB Micro cable (optional).
3. Connect USB touch cable to USB port in dongle and the other end to touch port in panel.
4. Connect HDMI plug in dongle to HDMI port in panel
5. Press power on button on dongle .

If you have any further trouble's with connecting device feel free to contact our office 1800 818 585